


Victor V286C DIP-Switch & Jumper Settings

DS1: Screen Settings & Battery

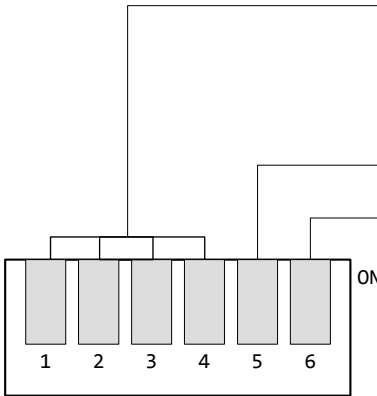


Graphics Mode	1	2	3	4
Monochrome	OFF	OFF	ON	OFF
Color 40 Columns	ON	OFF	OFF	ON
Color 80 Columns	OFF	OFF	OFF	ON
EGA	OFF	ON	ON	OFF

Screen "Super Mode" ON/OFF (OFF=EGA)

BIOS Backup Battery ON/OFF

DS2: Interface Settings

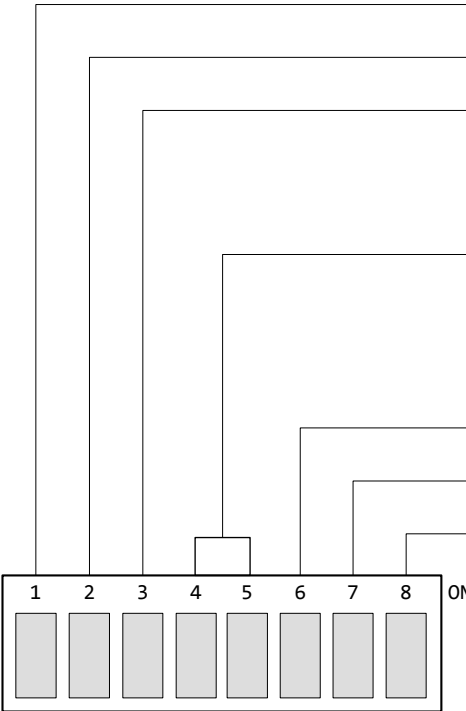

Floppy E/A	ON=3F2h	OFF=372h
Printer Interface	ON/OFF	
COM Port	ON/OFF	


Mouse E/A Address	4	5
230h - 233h	OFF	OFF
234h - 237h	OFF	ON
238h - 23Bh	ON	OFF
23Ch - 23Fh	ON	ON

Color Screen ON/OFF (OFF=Mono)

Not Connected

Reserved

DS3: RAM Configuration

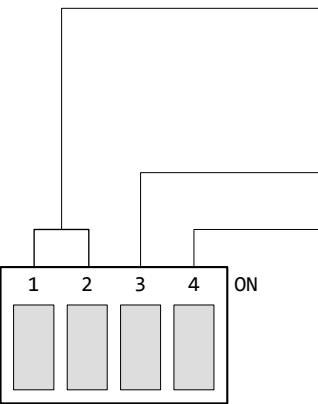


RAM Layout	1	2
512kb	OFF	OFF
512kb + 512kb	OFF	ON
640kb	ON	OFF
640kb + 384kb	ON	ON

Total RAM: ON=640k, OFF=640k+384k

Total ROM: ON=32k, OFF=64k

Must be same as S3/S4

 S1/S2: Mouse IRQ




S1

S2

IRQ5

IRQ3

 S3/S4: Total ROM. Must be same as DS3-4




S3

S4

32kb

64kb

 S201/S202: Internal Graphics Base Address




S201

S202

2xx

3xx

 S203/S204: Enable or Disable Internal Graphics



S203

S204

Enable

Disable